



Quicktrak 2 Wheel Laser Tracking Gauge Instructions CO2WLA

1. After opening your package, first remove the two M5 safety bolts from the two wheel hangers.
2. 2. Unlock the soft touch hand wheel on wheel frame, and then slide the wheel hanger down into the frame. Re- lock the hand wheel and then re- fit the two M5 safety bolts.
3. 3. Operating the switch. The number 1 position powers up the Laser, The centre position is the 'Off' setting and the number 2 position is for charging the battery.
4. 4. When the switch is at position 2, plug the charging lead into the socket and the LED will illuminate, this will stay on as long as it is plugged into the socket, but the resistor in the charging line will prevent the unit from over charging.
5. 5. Hang the Laser measuring Head onto the tyre and touch the wheel rim with the 3 aluminium buttons. Set the spirit level. Take the mirror measuring head and carry out the same procedure.
6. 6. Switch on the Laser and the Toe reading is reflected to the opposite scale giving you your measurement



JHM Butt & Co Ltd

Station Yard, Bawtry, Doncaster,
South Yorks DN10 6QD

Tel: 01302 710868

Email: info@buttsafbawtry.com

www.buttsofbawtry.com