

BFT1605

 
 
 
 
 

Diesel Fuel Line Priming Set




Instructions for use


**BUTTS OF
BAWTRY**
ESTABLISHED SINCE 1971

DIESEL FUEL LINE PRIMING SET

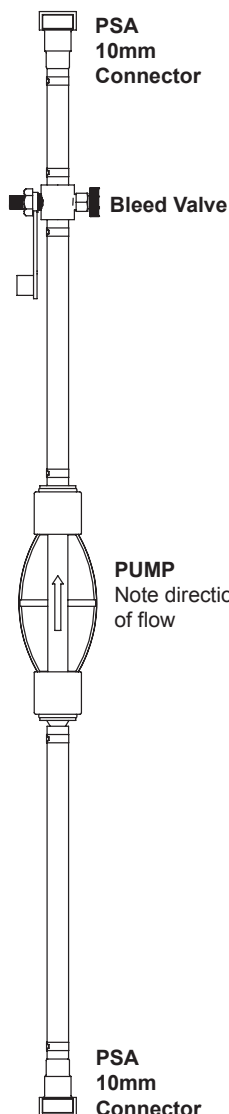


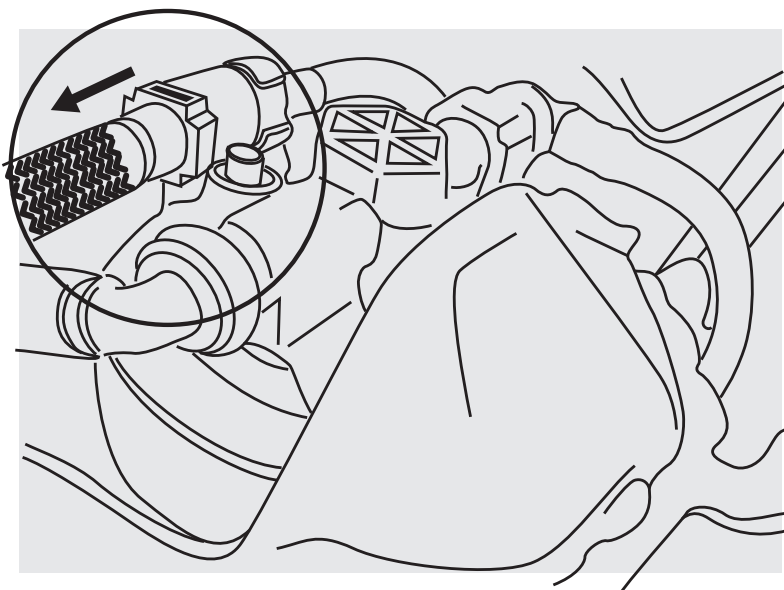


1.Disconnect low pressure diesel line.

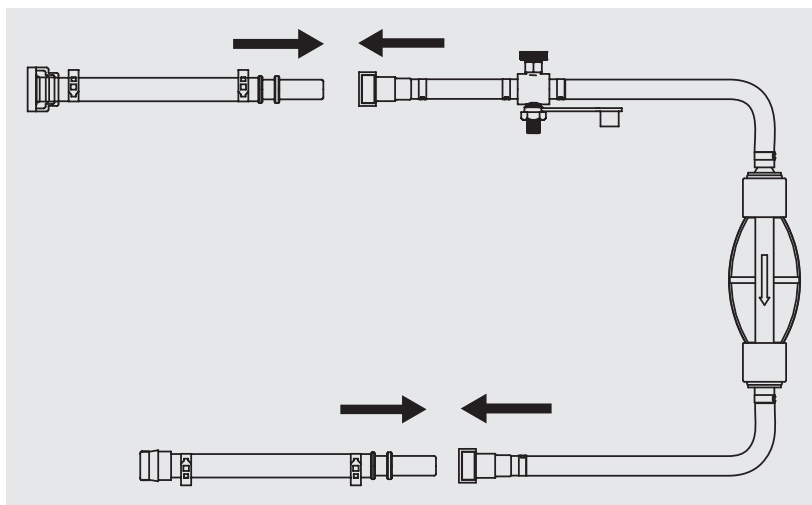


2.Choose right connector from the selection.

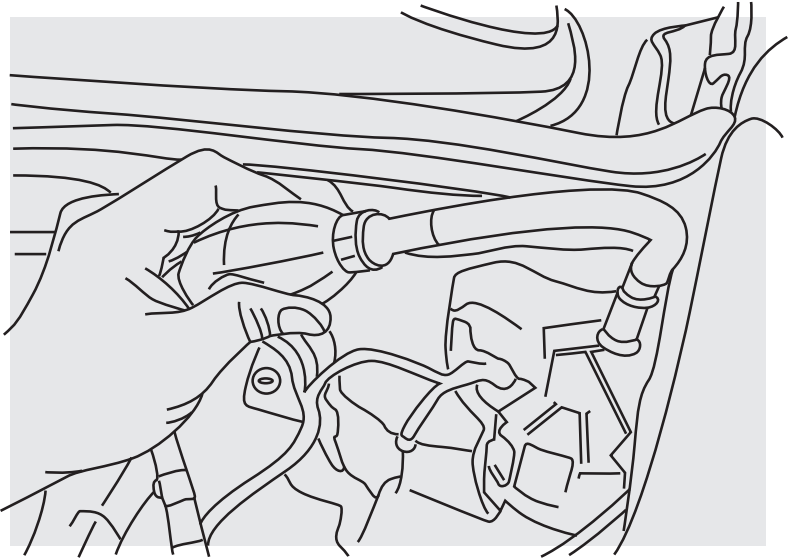

3.Connect to the system.

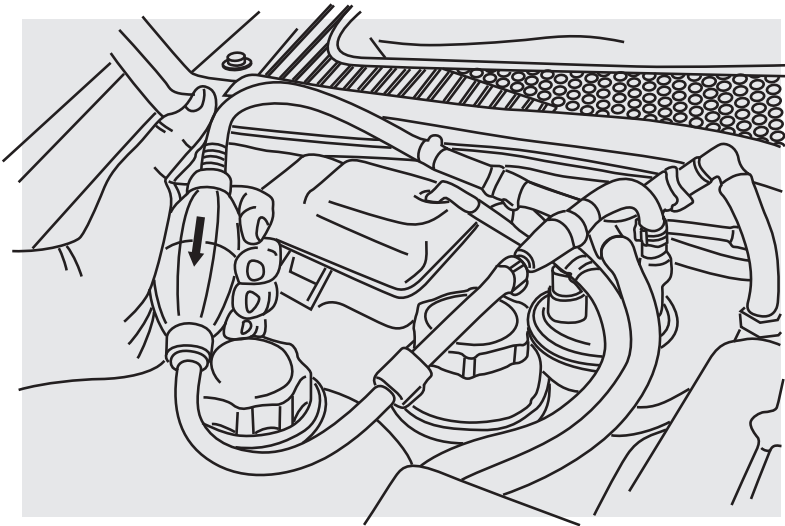

4.Pumping to bleed out air.

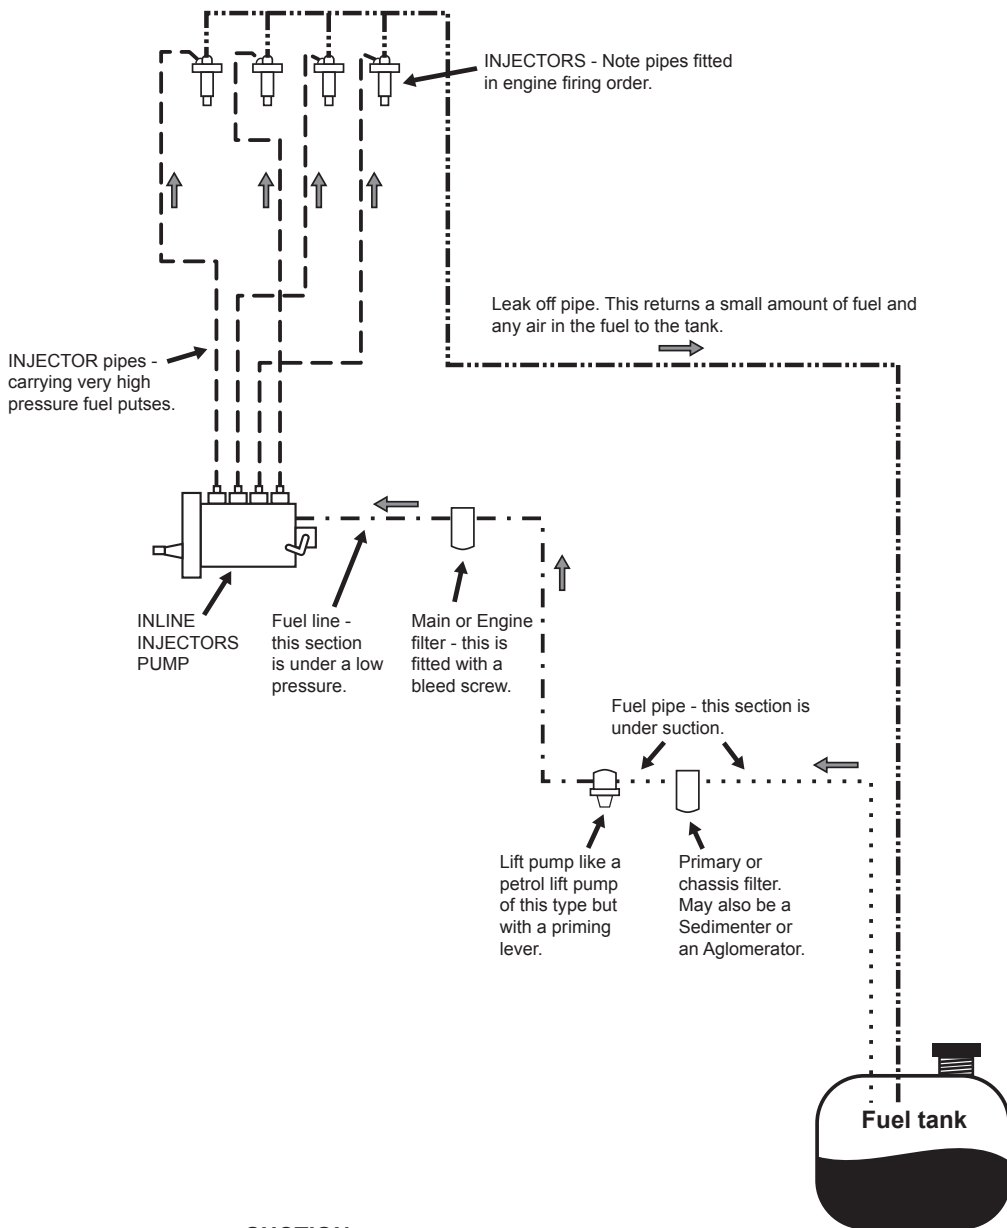

- **SUCTION**
- - - - - **LOW PRESSURE**
- **VERY HIGH PRESSURE (2500psi about 150bar)**
- **VERY LOW PRESSURE (depends on height of tank)**

Available
from



JHM Butt & Co Ltd

Station Yard Bawtry Doncaster
South Yorks DN10 6QD UK

Tel: 0044 1302 710868

Fax: 0044 1302 719481

Web: www.buttsequipment.com

Email: info@buttsequipment.com