



INSTRUCTIONS FOR MOTORCYCLE/TRIKE/ATV & MINI TRACTOR RAMP WIDE TRI-FOLD 680KG CAPACITY MODEL NO: FLR680T

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
Instruction
Manual



Wear protective
gloves

1. SAFETY

- ❑ **WARNING!** The warnings, cautions and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- ✗ **DO NOT** overload ramp, maximum capacity 680kg. All loads must be evenly distributed.
- ✓ Always use the safety strap to securely fasten the ramp to the vehicle to prevent the ramp slipping off the tailgate.
- ✓ Carefully roll or winch equipment up or down the ramp. never drive or ride your equipment while loading or unloading.
- ✓ Make sure the ramp is aligned with the wheels of the equipment being loaded or unloaded.
- ✓ Always load or unload on a solid, level, well lit and stable surface with the vehicle in gear the parking/emergency brake on and the engine off.
- ✓ Wear gloves. Remove ill fitting clothing, remove ties, watches, rings and other loose jewellery and contain long hair.
- ✓ Maintain correct balance and footing, do not over reach. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Use as a loading ramp only.
- ✓ Ramp surface must be clean, dry and free from oil, grease and water.
- ✓ Inspect ramp before each use. Check fasteners for tightness, replace any worn or damaged parts. Replace safety strap if webbing is frayed or worn.
- ✗ **DO NOT** attempt to use a ramp that is damaged in any way.
- ✗ **DO NOT** modify the ramp in any way.
- ✓ Proper care and maintenance of the ramp is critical to safety.
- ✓ Proper use of this product is critical to safety. Improper use may result in personal or property damage which is not covered by the warranty.

2. INTRODUCTION

Manufactured from strong, durable yet lightweight aluminium. Provides safe and easy ramp access for a variety of vehicles. Suitable for loading/unloading trikes, quad bikes, ride on lawnmowers or any other three or four wheeled vehicle up to a maximum of 680kg. Features safety securing chains and extended claws at one end to help secure ramp when in use. Folding design for compact storage when not in use.

3. SPECIFICATION

Model no: **FLR680T**
Folded dimensions L x W x H: 690 x 150 x 70mm
Extended dimensions L x W x H: 690 x 450 x 20mm
Maximum capacity: 660kg
Weight: 13.5kg

4. OPERATION

- 4.1. Make sure that loading is carried out on a hard, level and stable surface with the vehicle in gear, the parking/emergency brake on and the engine switched off.
- 4.2. Unfold and place the edge of the ramp against the tailgate of the vehicle.
- 4.3. Secure the ramp to the vehicle being loaded using the safety chains. Test the ramp by pulling backwards on it. Make sure it does not slide back or disengage from the loading surface.
- 4.4. Once the ramp is secure and the area is safe to proceed with loading, move the vehicle to be loaded behind the ramp.
- 4.5. Load the vehicle, make sure that the ramp is sustaining the load and not bowing from the weight.
- 4.6. Continue until the vehicle is fully loaded. Secure and then tie down the load.
- 4.7. Unhook the safety chain and fold the ramp.
- 4.8. Store in a clean, dry and childproof environment.

