



RCD SAFETY ADAPTOR 230V

MODEL NO: RCD981

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction
manual



Indoor use only

1. SAFETY

- ✓ For use with a 230V AC supply only.
- ✓ Test before each use (see section 4). If the unit trips repeatedly, seek professional advice.
- ✓ **DO NOT** allow to get wet or use in a damp atmosphere.
- ✗ **DO NOT** drop or subject to shock.
- ✗ **DO NOT** use if it suspected that the unit has been damaged.
- ☐ **WARNING:** This RCD is an electrical safety device and should not be regarded as a substitute for basic electrical safety precautions.

2. INTRODUCTION

Cuts power automatically to protect against electrocution. Suitable for all types of indoor and outdoor electrical appliances. Easy-to-use, two-button operation. No wiring needed - plugs straight into 13A socket. No need to remove from socket to reset unit.

3. SPECIFICATION

Model No:..... RCD981
Supply:.....230V
Maximum Load:.....3120W
Maximum Operating Current:13A
Trip Speed:.....30ms
Trip Current:30mA

4. OPERATION

- 4.1. Insert the RCD adaptor into a fixed 13A socket and then plug the portable appliance into the RCD outlet socket.
- 4.2. **Testing**
 - 4.2.1. Test the RCD before each use.
 - 4.2.2. With the appliance connected, push the 'Test' button. The RCD will automatically cut the electricity supply and the indicator flag will show 'off'
 - 4.2.3. To reconnect the electrical supply, press the 'reset' button. The outlet socket will be energised and the indicator flag will show 'on' (red).
- 4.3. If the RCD disconnects the electrical power at any time, remove the unit from the outlet socket and investigate the apparent fault.
- 4.4. If the RCD continues to trip, consult a competent electrician.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



Butts of Bawtry

Station Yard Bawtry Doncaster South Yorks DN10 6QD UK

Tel: 0044 (0)1302 710868 Fax: 0044 (0)1302 719481

Web: www.buttsofbawtry.com Email: info@buttsbawtry.com