

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.



SA206



SA206FR & SA206FRAD



SA206L



SA206F & SA206FAD



SA206R

1. SAFETY INSTRUCTIONS

- ❑ **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- ❑ **WARNING!** Disconnect the equipment from the air supply before changing accessories, servicing or performing any maintenance.
- ✓ Keep the equipment clean and maintain it in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ❑ **WARNING!** Ensure that the correct air pressure is maintained and not exceeded.
- ✓ Keep air hoses away from heat, oil and sharp edges. Check hoses for wear before each use and ensure that all connections are secure.
- ✗ **DO NOT** direct air from the air hose at yourself, others or animals.
- ✓ Drain the compressor air tank daily. Water in the air line will damage your equipment.
- ✓ When work is complete ensure that the air supply is turned off.

2. INTRODUCTION & SPECIFICATIONS

Suitable for industrial workshop air supply set-ups where high volume applications are required. Regulator assemblies feature locking control knob for pre-setting air pressure and large easy-to-read pressure gauge. Filters available with manual or auto drain facility with female 1/8"BSP outlet. Lubricator includes oil/air mix control and sight glass. Filter and lubricator are fitted with metal bowl cages for protection. SA206, SA206FR, SA206FRAD and SA206R supplied with mounting bracket.

Filter/Lubricator/Regulator - SA206

Max. inlet pressure150psi (10.3 bar)
 Max. outlet pressure125psi (8.6 bar)
 Max. flow rate @ 100psi (6.9 bar)105cfm
 Filter25 micron
 LubricantSealey Air Tool Oil - ATO/500 or ATO/1000
 Ports-Inlet1/2"BSP
 Outlet1/2"BSP
 Gauge1/4"BSP

Lubricator - SA206L

Max. inlet pressure150psi (10.3 bar)
 Max. outlet pressure125psi (8.6 bar)
 Max. flow rate @ 100psi (6.9 bar)175cfm
 LubricantSealey Air Tool Oil - ATO/500 or ATO/1000
 Ports-Inlet1/2"BSP
 Outlet1/2"BSP

Filter/Regulator - SA206FR, SA206FRAD

Max. inlet pressure150psi (10.3 bar)
 Max. outlet pressure125psi (8.6 bar)
 Max. flow rate @ 100psi (6.9 bar)140cfm
 Filter25 micron
 Ports-Inlet1/2"BSP
 Outlet1/2"BSP
 Gauge1/4"BSP
 Auto drainSA206FRAD only

Filter - SA206F, SA206FAD

Max. inlet pressure150psi (10.3 bar)
 Max. outlet pressure125psi (8.6 bar)
 Max. flow rate @ 100psi (6.9 bar)140cfm
 Filter25 micron
 Ports-Inlet1/2"BSP
 Outlet1/2"BSP
 Auto drainSA206FAD only

Regulator - SA206R

Max. inlet pressure150psi (10.3 bar)
 Max. outlet pressure125psi (8.6 bar)
 Max. flow rate @ 100psi (6.9 bar)210cfm
 Ports-Inlet1/2"BSP
 Outlet1/2"BSP
 Gauge1/4"BSP

WARNING! Filter and lubricator bowls are manufactured from polycarbonate and must not be used at temperatures over 125°F (52°C) or for pressures over 218psi (15 bar). Polycarbonate can be damaged and may fail if exposed to certain solvents either internally or externally - strong alkalies, compressor oils containing aromatic hydrocarbons or fire retardant oils, or the fumes of any of these. Clean with warm water only.

3. CONTENT & INSTALLATION

- 3.1. Confirm that all items are present and undamaged. If any parts are missing or damaged please contact the supplier.

SA206 - Combined filter, regulator with gauge, lubricator and mounting bracket.

SA206FR - Combined filter, regulator with gauge and mounting bracket.

SA206F - Filter.

SA206L - Lubricator.

SA206R - Regulator with gauge and mounting bracket.

SA206FAD - Filter with Auto Drain,


SA206FRAD - Combined filter with auto drain, regulator with gauge and mounting bracket.

- 3.2. Fig.1 shows a typical air line installation. The filter is located upstream of the regulator - unless combined, as in SA206 and SA206FR - and the lubricator downstream.

- 3.2.1. Filter/regulator - Install using the mounting bracket provided. Before connecting system piping ensure that gauge is visible, unused gauge port is sealed with plug provided and that flow direction arrow matches system air flow.

- 3.2.2. Filter and Lubricator - Install into air piping or connect directly to bracket mounted regulator using fittings provided. Always check that flow arrows are correct and that filter is upstream, and lubricator downstream, of regulator.

Note: To ensure air-tight joints, use PTFE tape.

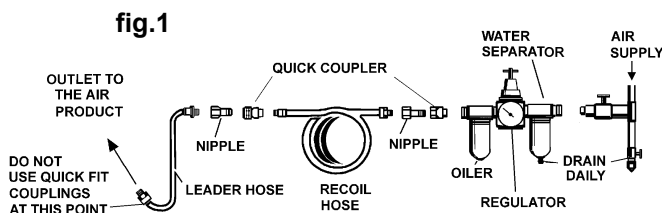

4. OPERATION

- 4.1. **Regulator** - The output pressure is controlled by the knob. Before pressurising the air system for the first time, pull out and rotate the knob anticlockwise to remove any loading on the regulator spring. Pressurise the system and then rotate knob clockwise to set required output pressure, as shown on gauge. When the required pressure is achieved push in knob to prevent inadvertent adjustment.

Note: For correct pressure setting always adjust up from a lower pressure. Therefore to reset from 90 to 70psi for example, reduce pressure from 90 to 60psi and then increase to 70psi.

- 4.2. **Filter** - The bowl should be drained regularly to prevent an excessive build-up of water/oil. Pull down the drain valve at the bottom of the bowl, allow to drain and then release. Drain valve has female 1/8" BSP outlet. (SA206FRAD and SA206FAD have Auto drain feature. When pressure in bowl drops, float valve opens and drains condensation. Drain valve has male 1/8" BSP outlet).

- 4.3. **Lubricator** - Remove the filler plug (**fig.2.A**) and fill bowl up to max. level, with air tool oil. This can be done with the air line pressurised. With air flowing through the lubricator the oil delivery rate can be adjusted by screw (**fig.2.C**) whilst watching the drip rate through the sight dome (**fig.2.B**). The oil delivery rate will automatically increase or decrease in line with the air flow.

- 4.4. Both the filter and the lubricator are supplied with a metal bowl guard. To remove the guard, pull down the latch (**fig.3.D**) and rotate the guard until either of the two pairs of lines (**fig.3.E**) on the guard align with the similar marks (**fig.3.F**) on the head. The guard can now be removed.

To refit, slide the top of the guard into the head with the guard and head markings aligned, and then rotate the guard so that the latch aligns with the marks on the head. The latch will lock into place.

fig.2

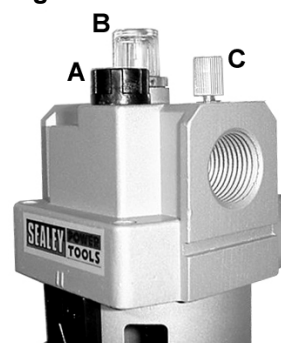


fig.3



5. PARTS

MODEL:	SA206	SA206FR	SA206F	SA206L	SA206R	SA206FAD	SA206FRAD
Filter Bowl:	SA206.B	SA206.B	SA206.B	---	---	SA206.B	SA206.B
Lubricator Bowl:	SA206.B1	---	---	SA206.B1	---	---	---
Regulator gauge:	SA206.G	SA206.G	---	---	SA206.G	---	SA206.G
Plastic Ring:	SA206.PR	SA206.PR	---	---	SA206.PR	---	SA206.PR
Wall Bracket:	SA206.WB	SA206.WB1	---	---	SA206.WB1	---	SA206.WB1

The following fittings are also available from your supplier:

SA1/1212	1/2" BSP male - 1/2" BSP male connector
SA1/1414	1/4" BSP male - 1/4" BSP male connector
SA1/1214F	1/2" BSP male - 1/4" BSP female reducer
SA1/3814F	3/8" BSP male - 1/4" BSP female reducer
SA1/1238F	1/2" BSP male - 3/8" BSP female reducer

6. DECLARATION OF CONFORMITY

Declaration of Conformity We, the sole importer into the UK, declare that the products listed here are in conformity with the following standards and directives.

Air Regulator, Filter & Lubricator Range.
Models: SA206, SA206FR, SA206F,
SA206L, SA206R, SA206FAD, SA206FRAD

97/23/EC Pressure Equipment Directive
 98/37/EC Machinery Directive
 93/68/EEC Marking Directive



The construction files for these products are held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

Signed by Mark Sweetman

Date: 12th April 2006

For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products.

JHM Butt & Co Ltd
 Tel: 01302 710868
 Fax: 01302 719481
 www.buttsequipment.com