

ABS/EBS TESTER

Quick, Simple and the most Comprehensive tester on the market!

**TESTS FOR THE 6 MOST COMMON
EBS & ABS FAULTS.**

Correct Ohms resistance

Open circuit

Short circuit

Pole ring tooth damage

Pole ring misalignment

Sensor gap measurement

**Call 01302 710868
For more info**



This tool is specifically designed to test the wheel speed ABS and EBS sensors. Simply plug into the sensor, press the 'ON' switch and wait for the 'SENSOR OK' LED to illuminate. Then spin the wheel. Results within 15 seconds.

**BUTTS OF
BAWTRY**
ESTABLISHED SINCE 1971

Butts of Bawtry

Station Yard Bawtry Doncaster South Yorks DN10 6QD UK

Tel: 0044 (0)1302 710868 Fax: 0044 (0)1302 719481

Web: www.buttsofbawtry.com Email: info@buttsbawtry.com