SMI 4500

45cm Convex Indoor Security Mirror

Installation Instructions









FOR YOUR SAFETY

Please read these instructions carefully and retain them for future use.

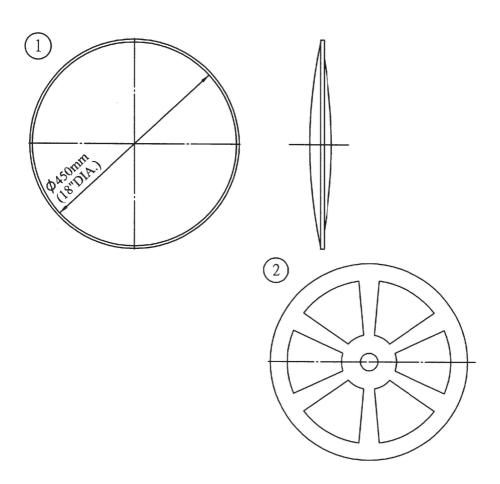

P.N.	DESCRIPTION	SPECIFICATIONS	UNIT	Q'TY	REMARK
1	Mirror Surface	Acrtlic - Diameter: 450mm	Piece	1	Clear & waveless surface w/curve radius:R1200
2	Backboard	PP(Polypropylene)	Piece	1	White
3	Swivel	POM	Piece	1	360-degree adjustable
4	Arm	Chrome plated steel plate	Piece	1	Ceiling mount use
5	L-bracket	Chrome plated steel plate	Piece	1	Wall mount use
6	Adjustable Bracket	Chrome plated steel plate	Piece	,1	Crescent-shape opening for angle adjustment
7	Nut/Washer for Swivel	M8	Set	1	(3)Swivel & (4)Arm/(5)L-bracket assembly use
8	Bolt & Nut	Galvanized steel	Set	2	(6)Adjustable Bracket & (4)Arm/(5)Lbracket assembly use
9	Wood Screw	Galvanized steel	Set	3	
10	Anchor	Plastic	Set	3	
11	U-bolt	Galvanized steel	Piece	1	Post mount use

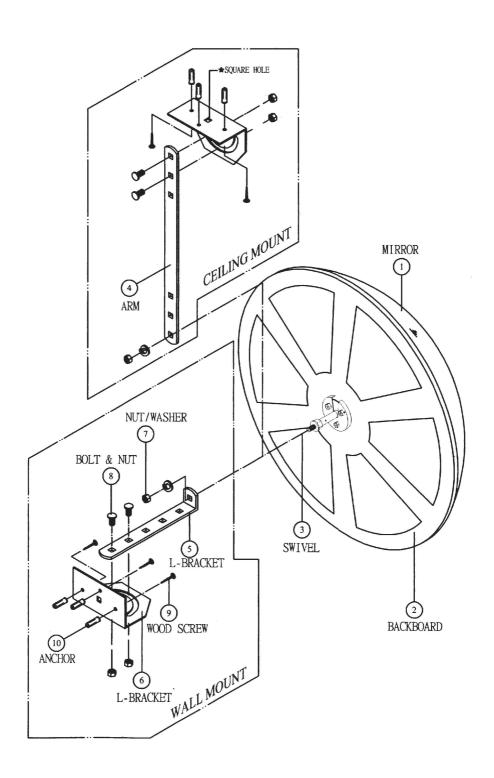

- 1. Obtain a proper place on the wall or the ceiling. Place the 6 crescent-shape opening plate on or against the surface to which it will be attached. Mark the location of screws with a pencil.
- 2-1. Wooden surface: Attach **6** crescent-shape opening plate with **9** wooden screws directly.
- 2-2. Brick or concrete surface: Drill three 1/4"(6.35mm) diameter and 1-1/4"(32mm) deep holes. Insert
 Attach (6) crescent- shape opening plate to the surface with (9) wooden screws.
- 2-3. Metal surface: Drill one 5/16"(8mm) diameter hole. Attach **6** crescent-shape opening plate with one set of **8** flange nut and **8** bolt through *square hole.
- 3-1. Wall mount :Use (8) flange nuts and (8) bolts to tighten (5) "L" bracket on (6) crescent-shape opening plate.
- 3-2. Ceiling mount: Use **(8)** flange nuts and **(8)** bolts to tighten **(4)** arm and **(5)** "L" bracket on **(6)** crescent-shape opening plate.
- 4. Loosen (3a) adjustment screws to protrude (3) swivel. Insert (3) swivel into the hole on (5) "L" bracket(wall mount) or (4) arm(ceiling mount). Then tighten it with (7) spring washer and (8) nut.
- 5. Loosen (8) flange nuts and (8) bolts on (6) crescent-shape opening plate.

 Adjust the mirror and (5) "L"bracket(wall mount) or (4) arm(ceiling mount) to desired angle, then tighten (3a) adjustment screws, (8) flange nuts (8) bolts again.
- 6. For extended arm assembly, fix (5) "L" bracket and (4) arm together with (8) flange nuts and (8) bolt first. Then follow above procedures to attach the mirror.

Maintenance Information

- 1. Periodic cleaning: Plastic mirrors can be easily cleaned with a soft cloth dampened with water. Applying a spray wax or liquid plastic cleaner to the front surface of the mirror and wiping with a clean, soft cloth once or twice a year(or more as necessary) is recommended. This may reduce static and give the mirror a high gloss finish.
- 2. CAUTION! Do not use any ammonia types or abrasive cleaning agents on plastic mirrors.

©JHM BUTT & CO LTD 2013



JHM Butt & Co Ltd
T: 01302 710868 F: 01302 719481
E: info@buttsequipment.com
W: www. buttsequipment.com